

CX-CL-LZBRK

L & Z Brackets for Cabinet Lock

INSTALLATION INSTRUCTIONS

THIS PACKAGE INCLUDES:

2 - M4 x 12mm Screws 1 - L Bracket 4 - M3 x 8mm Screws
4 - ST3.5 x 19mm Screws 1 - Z Bracket



1. GENERAL DESCRIPTION


These professional-grade L&Z brackets provide an ideal solution for mounting CX-EPD0009 cabinet locks on in-swinging, single doors. The L bracket is designed for attaching the magnet to the door frame's face when header space is unavailable. The Z bracket allows for horizontal adjustment of the plate pin.

2. SPECIFICATIONS

| | |
|------------------------|---|
| Dimensions (L Bracket) | 2-1/2" H x 1-3/32" W x 1-1/8" D (64mm x 28mm x 29mm) |
| Dimensions (Z Bracket) | 2-1/2" H x 1-5/8" W x 3" D (64mm x 41mm x 76mm) |

3. DIMENSIONS

L Bracket

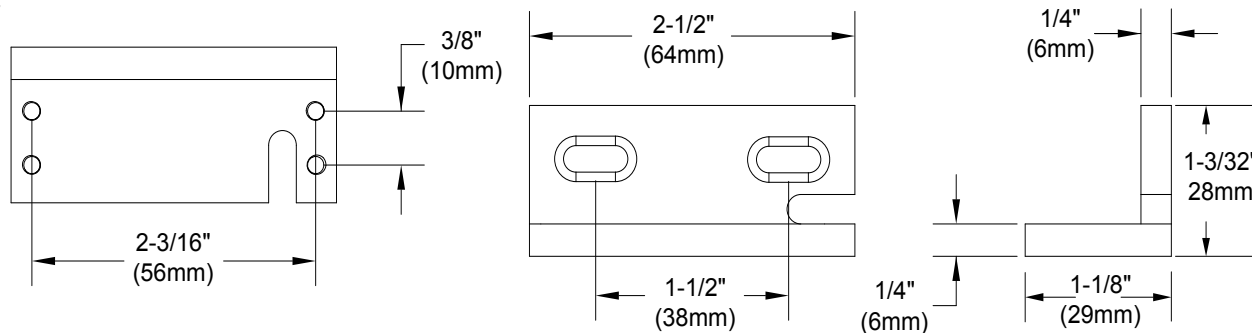

Z Bracket

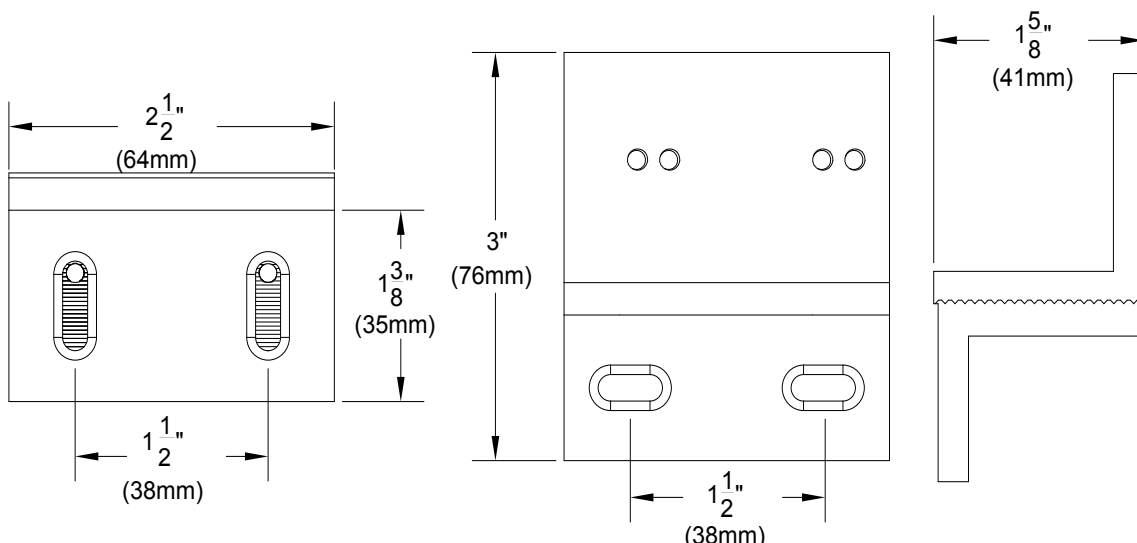


Figure 3.1 L&Z Brackets Dimensions

4. INSTALLATION (NORMAL DOOR)

1. L Bracket:

- Align the L bracket near the upper corner of the door, ensuring a minimum gap of 3/8" (10mm) to allow the door to close properly.
- Mark the bracket's mounting location. Drill holes using a pilot drill bit. Attach the bracket to the frame with the provided ST3.5 x 19mm screws.
- Secure the locking body using m3 x 25mm socket head cap screws.

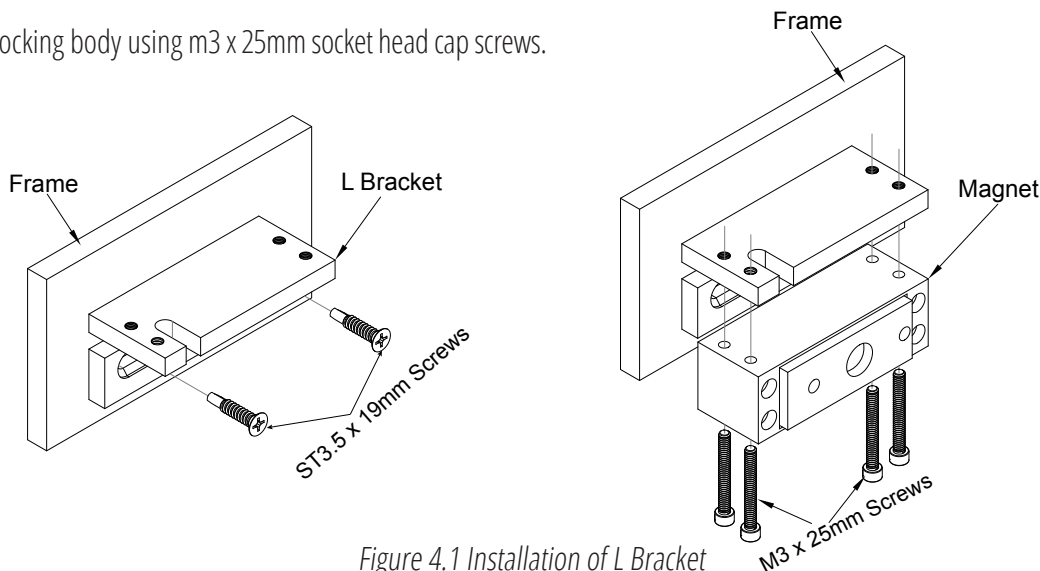


Figure 4.1 Installation of L Bracket

2. Z Bracket:

- Put together the Z bracket using the provided M4 x 12mm screws. Ensure the bracket can adjust freely before final tightening.
- Fix the plate pin to the Z bracket with an M3 x 8mm screw (refer to the provided figure for guidance).
- Firmly attach the Z bracket to the door using ST3.5 x 19mm screws.

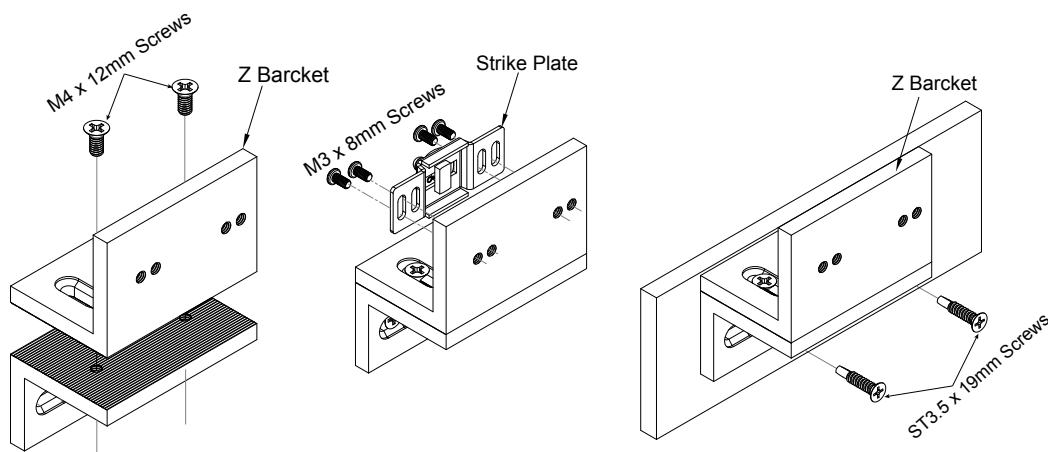


Figure 4.2 Installation of Z Bracket

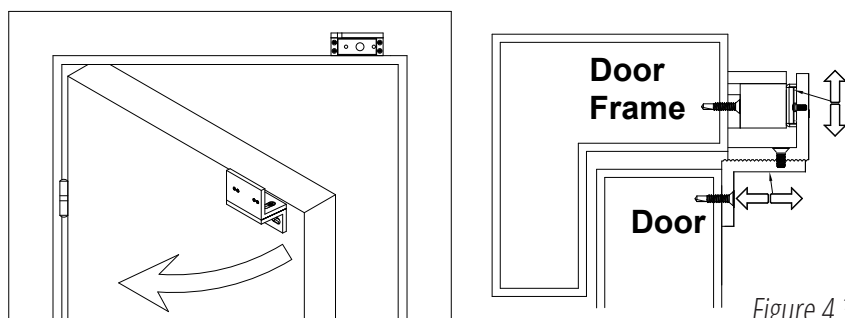


Figure 4.3 Schematic of L&Z Brackets Installed

5. INSTALLATION (SLIDING DOOR)

Marking the Location: Begin by determining the precise location where the L portion of the Z bracket will be attached to the sliding door. Use a marker to indicate where the holes for the ST3.5 x 19 mm screws will be drilled.

Drilling Pilot Holes: Before attaching the bracket, drill pilot holes at the marked locations to ensure a secure fit for the ST3.5 x 19 mm screws. This will prevent the wood from splitting and ensure the screws are easier to install.

Attaching the Z Bracket: With the pilot holes drilled, attach the L portion of the Z bracket to the sliding door using the two provided ST3.5 x 19 mm screws. Do not fully tighten the screws yet; leave some slack for adjustments later. The design of the Z bracket allows for horizontal movement to ensure proper alignment.

Securing the Strike Plate: Attach the strike plate to the Z bracket using four M3 x 8 mm screws. Once in place, fully tighten the ST3.5 x 19 mm screws to secure the Z bracket firmly to the door.

Installing the L Bracket on the Opposite Surface:

On the surface parallel to the Z bracket, attach the L bracket with the two provided ST3.5 x 19 mm screws. Again, remember not to fully tighten the screws at this stage to allow for vertical adjustments. The L bracket's design permits vertical movement for better alignment.

Aligning and Securing the Cabinet Lock: Position the cabinet lock to ensure the plate pin aligns and inserts correctly into the lock. If the alignment is satisfactory, tighten the ST3.5 x 19 mm screws to secure the L bracket in place.

Finalizing the Installation: Attach the cabinet lock to the L bracket using four M3 x 25 mm screws. After installation, thoroughly check the functionality of the lock to ensure it operates smoothly and securely."

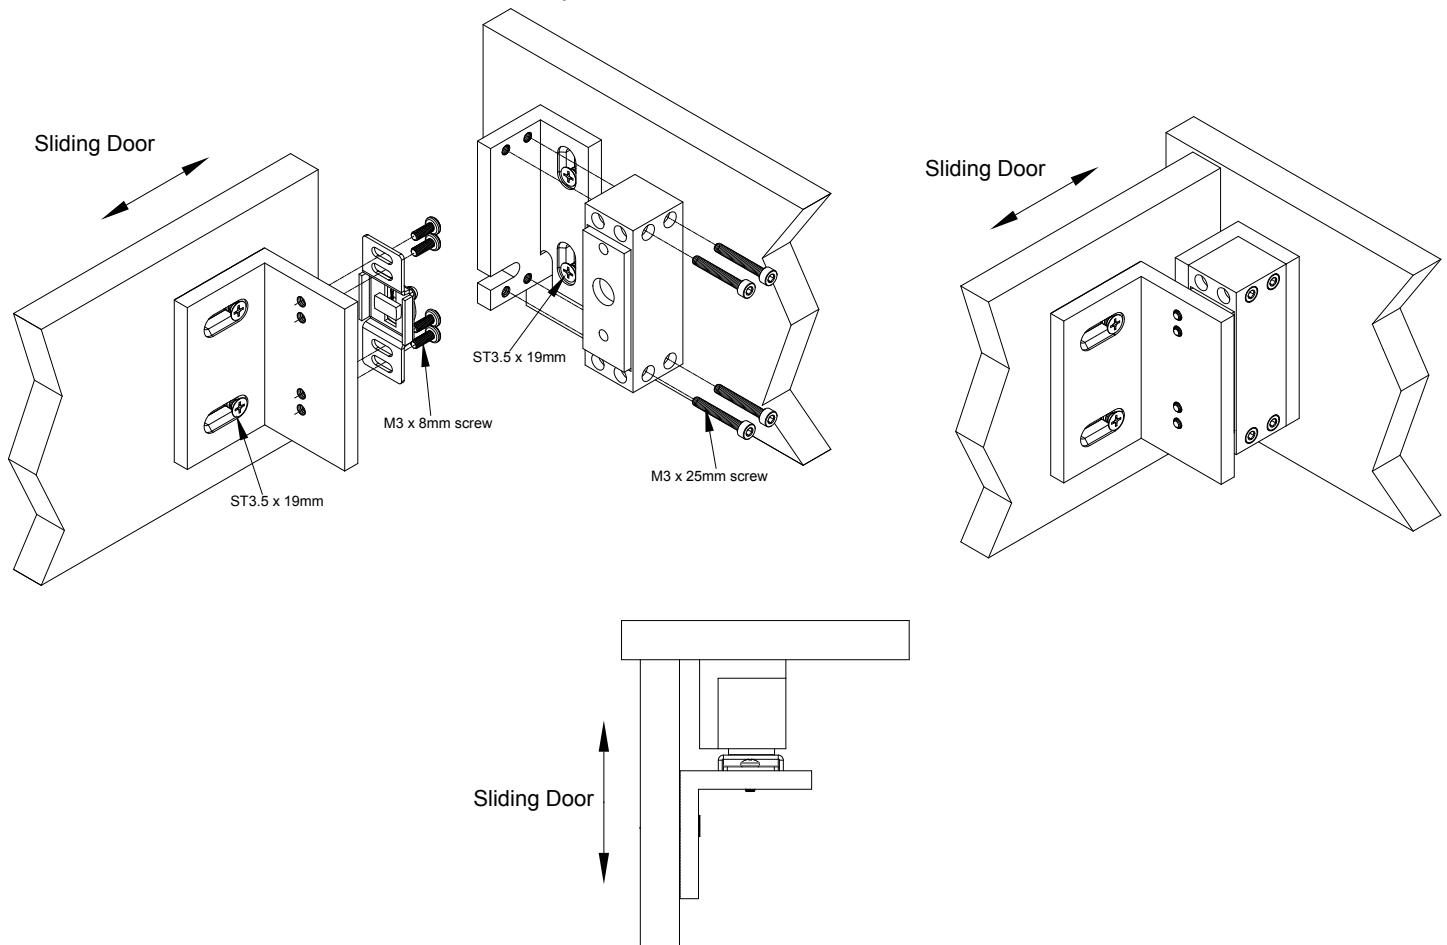


Figure 5.1 Installation of Cabinet Lock on Sliding Door Using L & Z Brackets